

Fittings

Removing and Installing Door Handles

20 B0

Removal

1. Remove door panels (10 B0).
2. Remove the screw from the front of the handle.

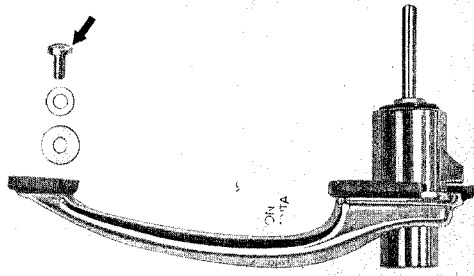


Fig. 91

Installation

The installation is accomplished in the reverse order of removal observing the following points:

1. Install new rubber pads under the door handle if necessary.
2. Test the length of the push rod before replacing the door panel. If necessary, file off the end of the push rod or adjust by bending so that the lock functions properly.

3. Remove the door handle and locking assembly pulling forward and out so that the tang at the base of the lock becomes free from the door.

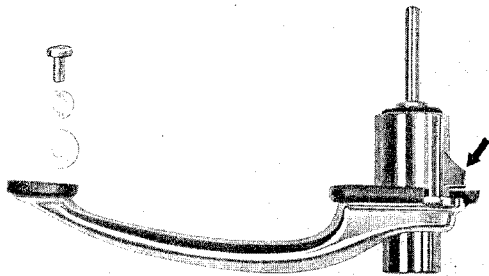


Fig. 92