Cabriolet Convertible Top

Convertible Top

General

The cloth top is fastened to wooden bows at the front and top rear. A steel pipe bow is used as main support and is connected to the body by a hinge at the door post.


The remaining metal bows are connected to the main bow through hinges. A trim strip is nailed to the wooden rear bow above the window.

27 BO

Raising and Lowering Cloth Top

Lowering

- 1. Roll down windows or open both doors.
- 2. Release the three top latches above the windshield.
- Raise top at front and push toward rear. The cloth must lie between the bows in smooth folds. The rear window should be positioned so that it is as smooth as possible.



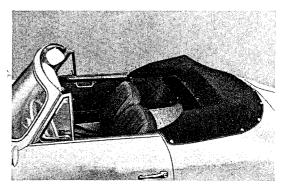


Fig. 130



11016

Clean the cloth and rear window before lowering in order to avoid scratching the plastic window. Brush off cloth and clean the window with a soft wet rag or sponge. Never fold down a wet top.

Fig. 129