


Fig. 130

- 1 Gear shift knob
- 2 Rubber boot
- 3 Gear shift lever
- ④ Gear shift bracket
- 3 Roll pin
- Spring
- Ball
- 8 Socket
- Retaining plate

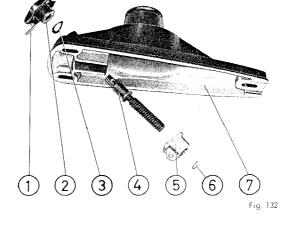

- ① Roll pin
- ② Heater control knob
- ③ Spring washer
- 4 Spindle for heater control
- 3 Nut for heater control
- 6 Lock ring
- Gear shift bracket

Installation

The installation is accomplished in the reverse order of removal observing the following points:

 Install nut for heater cable with the eye to the front (front of car).

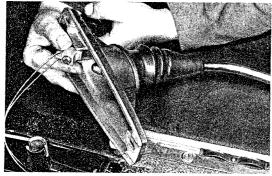


Fig. 131

- 2. Check whether the shift rod guide is centered over the rear threads of the bracket.
- Install gear shift bracket and secure with three allen screws aligning the markings previously inscribed on the bracket.

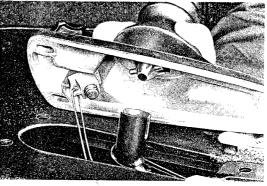


Fig. 133